

4. Attention

4.1 Please do connect to the power adapter before using. Voltage rating is 24V, current rating is 3A. Do not exceed load. Avoid using same power supply with high-power electrical appliance to maintain voltage stability. Please place switch to Stop when inserting or pulling out the plug.

4.2 Avoid too much moist and too much dust. Avoid too fouling, high temperature or sensitive magnetic field. Keep away from gasoline, paint or other flammable goods to avoid accidents.

4.3 No trample or hard fall to avoid the parts broken, thus affect the use.

4.4 Do not pour or dip in water, the device is without water proof, please keep away from water to avoid accidents.


4.5 Do not keep the device face to people when installing. Do not erect it.

4.6 Scope diameter for paper core: 48-53mm, 75-80mm. Please choose the paper core according to the above range.

4.7 Do not exceed 40kgs, the diameter of medium(paper core included) shall not exceed 260mm.

Operation Manual of Take up System T1


Please read operation manual before using

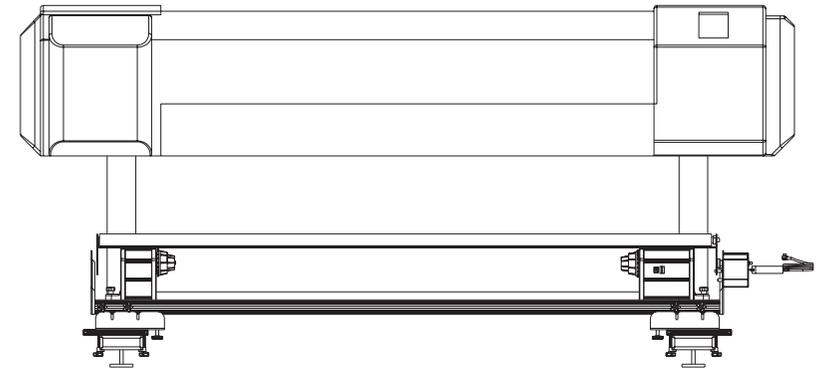


Catalogue


1. Packing list.....	1
2. Installation.....	2
1) Installation of linking slab	
2) Installation of universal linking slab and printer	
3) Tighten the linking slab.	
4) Installation of position pin	
5) Installation of Take up System and printer	
6) Installation of paper tube	
3. Switch operation.....	4
4. Attention.....	7

6) Installation of Paper tube

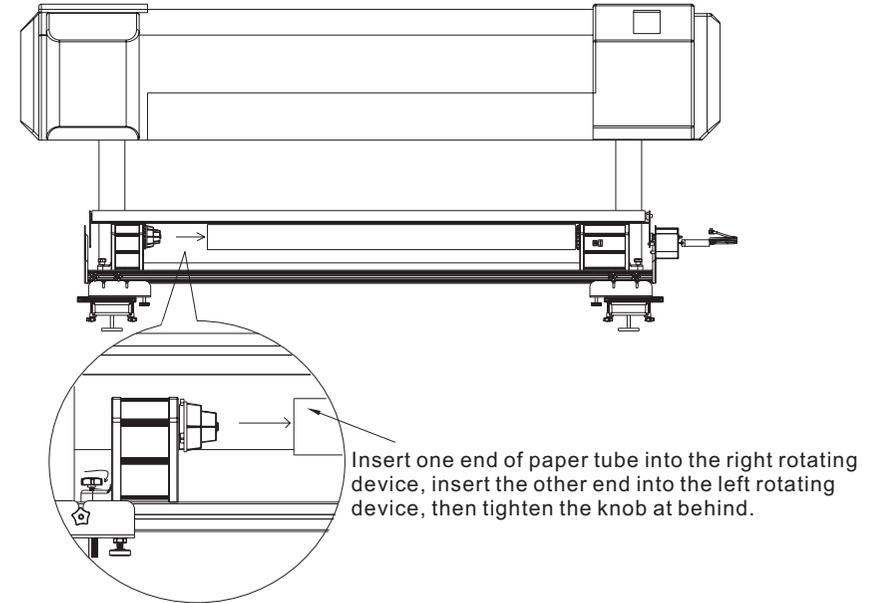


3. Switch operation

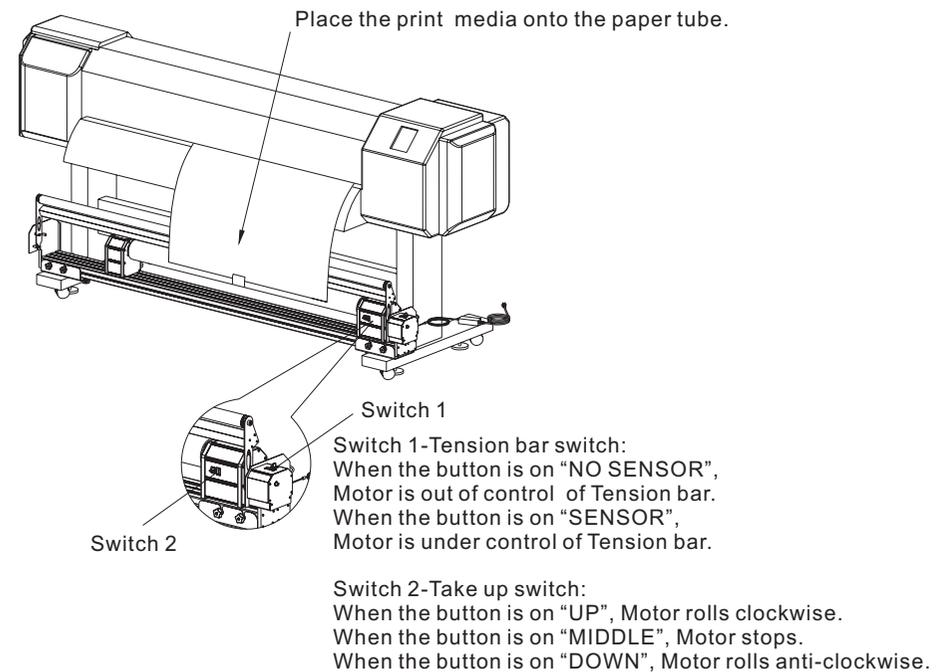

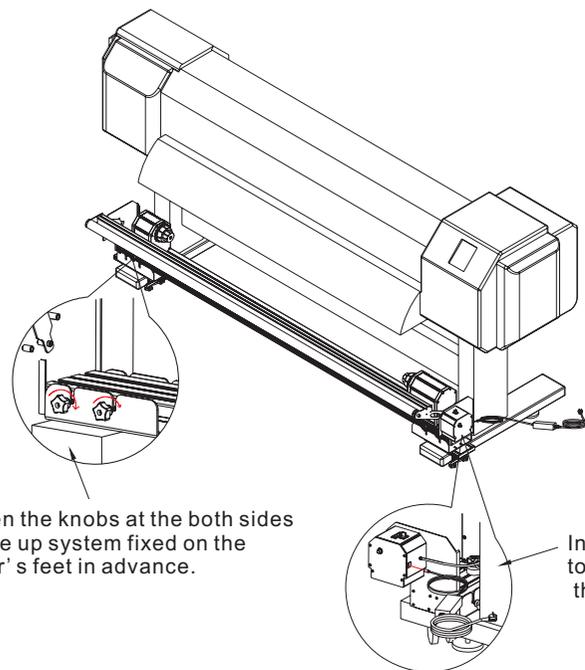


Tighten the knobs at the both sides of take up system fixed on the printer's feet in advance.

Insert the adaptor connected together in advance into socket at the right side of main part.

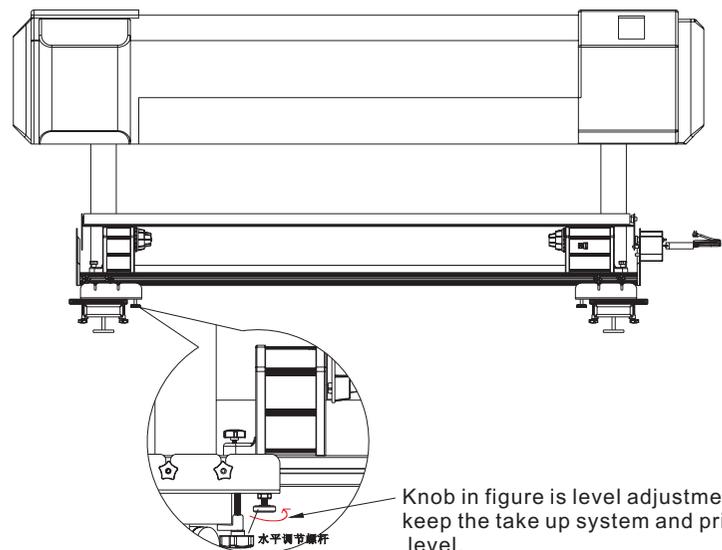

Knob in figure is level adjustment screw, used to keep the take up system and printer in the same level.


1. Packing list

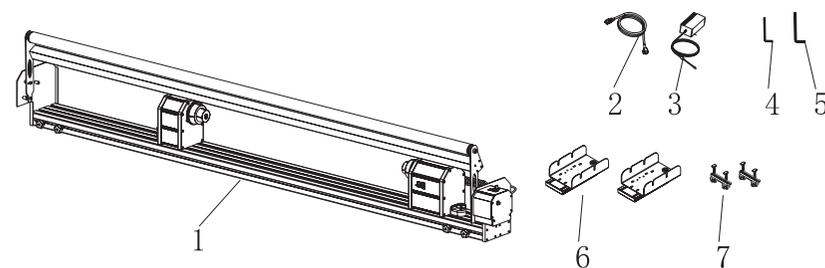

No.	Name	QTY	No.	Name	QTY
1	Take up System T1	1	5	Hex wrench 5mm	1
2	Power cable	1	6	Universal linking slab	2
3	AC 24V Adaptor	1	7	Hex wrench M5*10	2
4	Hex wrench 4mm	1			


2. Installation

1) Installation of linking slab

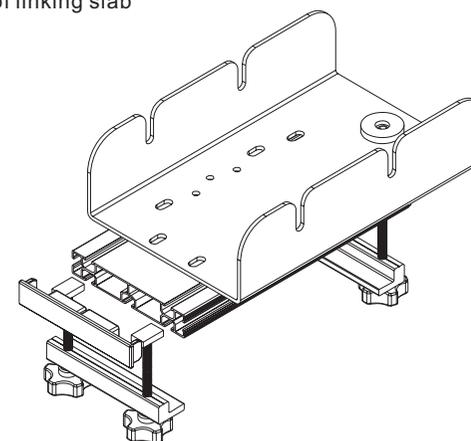


Open plastic cover and slip the fasteners into aluminum bar, then install the cover.

2) Installation of universal linking slab and printer

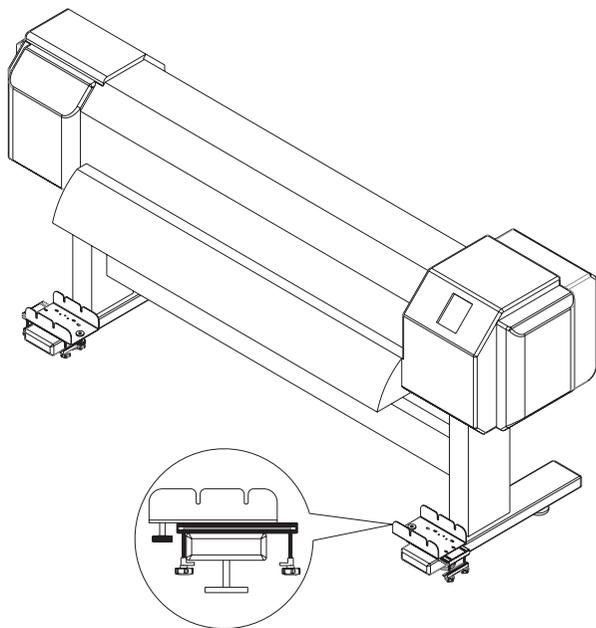


Install linking slabs to printer stand, pay attention to installation direction.

3) Tighten the linking slab

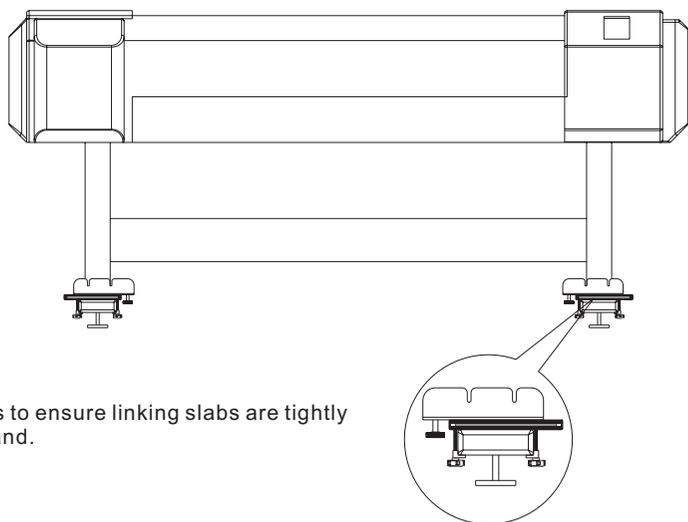


Tighten the screws to ensure linking slabs are tightly fixed on printer stand.

4) Installation of position pin

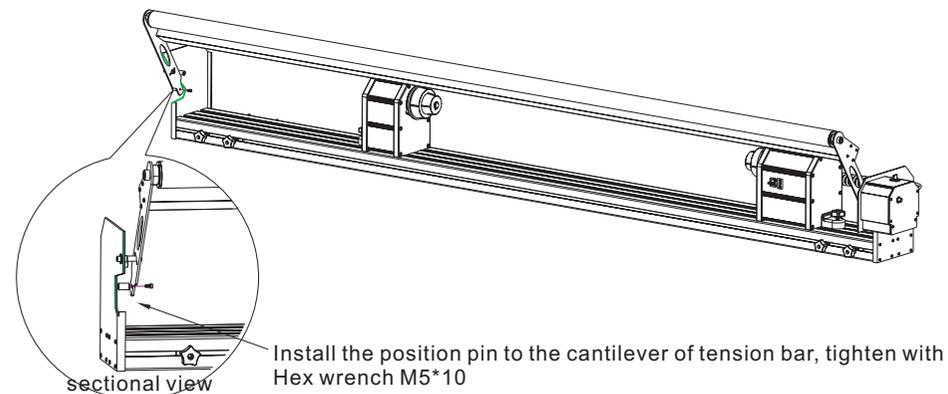

Install the position pin to the cantilever of tension bar, tighten with Hex wrench M5*10

5) Installation of Take up System and printer

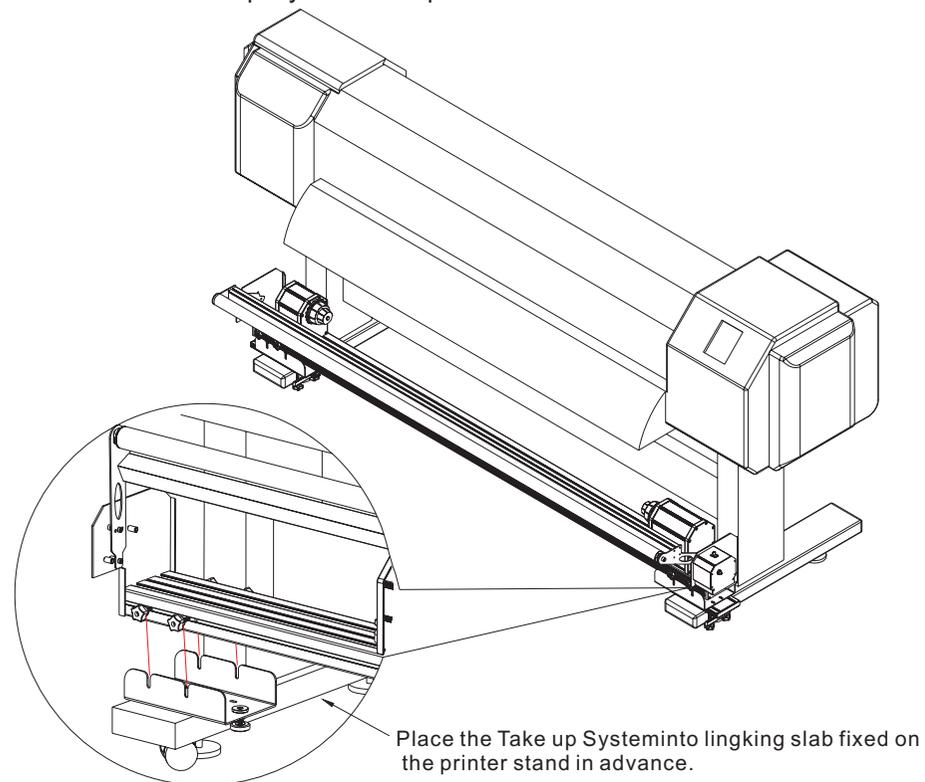

Place the Take up System into linking slab fixed on the printer stand in advance.