

Quick Installation Guide

Read this sheet carefully before using this product and keep it in hand for future reference

Bulk ink system for Mimaki / Roland / Mutoh(Use floater cartridges system)



Before installation, please check the components in the package if they are intact.



BIS-B4S



BIS-B4D



BIS-B6S



BIS-B6D



Customized set available

BIS-B6S



Normal floater cartridges



Vertical floater cartridges for VS series printer



Directly tubing cartridges

Thank you for choosing this product, this system provides the perfect third-party ink solutions. Before installation and using of this product, please carefully read the installation instructions. Take Jv33 as an example for this installation instructions, different printer models have different system configurations, but the installation method is the same. If you have any questions about our products, please contact our service department or distributor.



EN Install the bottle components and the bracket. (For Roland and Mimaki), Connect the bottle and the cartridge with appropriate length ink tube



EN Connect the cartridge and the lock valve with appropriate length ink tube. Place the bottle components in the appropriate position of the printer, plug the cartridges into the printer cartridges slot and connect the ink tube corresponding to the color

Note: connect the bottles of each color with the corresponding cartridges

Professional and reliable connection is the first step to ensure this system work stable



EN Confirm each bottle correctly connect with corresponding cartridge, and paste the corresponding color label, then add ink into each bottle.



EN Install chips in the chip slot in the front of the cartridge

Note: For the user who use decoder for Mimaki, please note that you must put a fake chip in the chip slot in the front of the cartridge, otherwise the chip sensor will be damaged

EN Install chip in the chip adapter behind the cartridge.



EN Adjust the ink level in the cartridges

For normal speed printing, please adjust the ink level in the middle position of the cartridges.
For High speed printing, please adjust the ink level in the high position of the cartridges.

Note: when you feel resistance during adjustment, Please stop it, so as not to damage the floater.



EN Vertical ink supply system and Direct ink tube connecting system have the same cartridges installation method.