


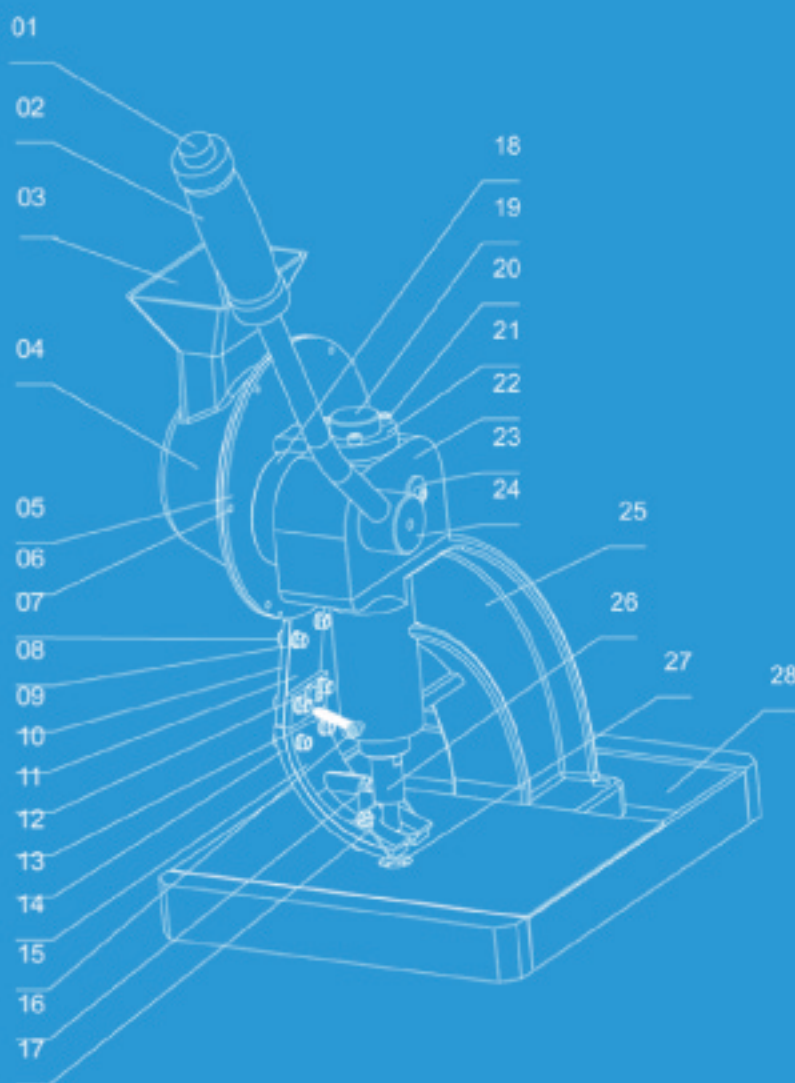

eyelet hand pressing tool ET10, semi-automatic

Warning:

- 1.Put eyelets into the cartridge. The eyelets couldn't be over 200pcs each time. Pull the conveyer belt by hand and shake the handle until the eyelets full of conveyer belt, then start pressing;
- 2.If eyelets couldn't come out, please shake the handle until eyelets full of the conveyer; If eyelets still couldn't come out by shaking handle, please take down the cartridge to see whether there are sundries and deformation eyelets.
- 3.The handle must go back in position when finishing pressing one eyelet, so that the next eyelet could be automatic placed in prompt place;
- 4.Make sure not to use other eyelets and not to put sundries into the cartridge, otherwise the machine may will break down;
- 5.Two years warranty. If you have any question please contact distributors.It shall be borne by the customer for maintenance and freight if the loss is caused by improper use;
- 6.Each machine with 10000pcs eyelets. Please contact distributors when using up;
- 7.Please move the machine with two hands holding the body of machine. Make sure not to move by only carrying the handle. The harm caused by moving the machine by only carrying the handle shall be borne by the customer themselves;
- 8.Please install the handle according to the left drawing;Please align the pit with the thread hole when installing the handle.

simple. good. affordable.

Spare Parts

1. Handle	5. Fixed Tray	9. Spur Guide	13. Lead Rail	17. Loading Ring	21. Dead Plate	25. Body
2. Handle Cover	6. Screw	10. Backing Board	14. Gauge Plate	18. Spring Seat Cap	22. Continuous Block	26. Top Die
3. Funnel	7. Screw	11. Extension Spring	15. Screw	19. Gear Shaft A	23. Gear Shaft B	27. Bottom Die
4. Cartridge	8. Nut	12. Spring	16. Attaching Screw	20. Screw	24. Gear Shaft C	28. Pellet