



# Sign-in-China.com

Online Wholesale for AD & Signage Products




## 01 LCD Controller

Big Panel, Easier using  
Stable quality.



## 02 Start Buttons

Two sides start buttons  
more safe for operation

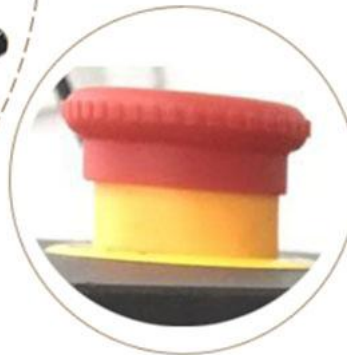

## 03 Emergency Device

Emergency-Stop button  
could stop working at once  
when you press



## 04 Drawer Design

Drawer design more convenient  
when you transfer

# INSTRUCTION MANUAL

# HEAT PRESS MACHINE INSTRUCTION

## CK101

The press can provide high pressure and timing, drawing out table.

Using for pressing oil, printing textiles and other materials may be used on food, t-shirts, mouse pads, puzzles, ceramic tiles, and other flat surfaces items by using the flex, flocking, transfer printing paper, sublimation etc.



## COMPLY WITH THESE INSTRUCTIONS

1. Do not put the wire on heating plates cover.
2. Do not touch heating plates when it is energized. Caution: Risk of burns.
3. Do not open the machine box and make changes to the device.
4. Do not allow liquid or metal objects inside the hot press.
5. Make sure the machine is connected with a plug connected to the mass.
6. Don't pull the cable to disconnect the plug.
7. Power off the machine when finish using.
8. Use extreme caution when using near children.
9. Make sure that the device is used in an environment.

# 1.SET TEMPERATURE & TIME

(Blue means temperature, white means time)

2.1.Press on the on / off switch located on the side of the heat press to be energized.

2.2.Press once on the "SET", temp number will flicker on the display.Press "▼" or "▲" to the desired temperature.



①



②

2.2.Press once again on "SET", time number will flicker on the display.Press "▼" or "▲" to the desired time.



2.3.Press "SET" again after finish all setting to come out setting mode.

## 2.Printing

when the machine has reached the desired temperature, Put objects on table,push it into machine,Press the two buttons on the left and right side,machine start to press down and time,when time is up,machine open automatic, pull out the table and pick up the objects.

## 3.Common Problem:

	Problem	Cause	Handling methods
1	Fails to heat up,but display well	Heating plate or Relay broken	Check the heating plate or Relay
2	Power on but controller Screen out	Controller broken or Connection line of controller loosen	Check connection line or change a new controller
3	No action after turn on power	Plug whether touch well Fuse whether burn	Check the plug and fuse
4	The real temp pass over setting temp	Relay broken	Replace the relay

## 4. For cleaning and maintenance of the printed products.

4.1.Printed items can be washed 24 hours after printing.

4.2.Do not rub the printed image after printing.

4.3.Frequently wash items by washing machine can damage the image.

4.4.Avoid using cleaner or brush image.

4.5.Do not expose in the sun too long.