# **INSTRUCTION MANUAL**



## **HEAT PRESS MAHCINE INSTRUCTION: CH1808**

The press is equipped with a manual override, a digital display, and a sound signal at the end of work.

Our company makes easy and quick adjustment of pressure as a function of the print at any time.

Designed for printing textiles and other materials may be used on food, t-shirts, mouse pads, puzzles, ceramic tiles, and other flat surfaces items by using the flex, flocking, transfer printing paper, sublimation etc.

## **COMPLY WITH THESE INSTRUCTIONS**

- 1. Do not put the wire on heating plates cover.
- 2. Do not touch heating plates when it is energized. Caution: Risk of burns.
- 3. Do not open the machine box and make changes to the device.
- 4. Do not allow liquid or metal objects inside the hot press.
- 5.Make ensure the machine is connected with a plug connected to the mass.
- 6. Don't pull the cable to disconnect the plug.
- 7. Power off he machine when finish using.
- 8. Use extreme caution when using near children.
- 9. Make sure that the device is used in an environment.

## **1.SET PRESSUREN**

1.1.Adjust pressure in a clockwise direction to increase pressure and in the opposite direction to decrease by turning the knob.

# **2.SET TEMPERATURE&TIME**

#### 1.Set temperature



Press STE button
2.Set time



"Temperature setting"blink



Press SET button after setting temp



Press arrows " $\bigtriangleup$  "or"  $\nabla$  "adjust temp you need



Press arrows " $\triangle$ "or" $\nabla$ "adjust temp you need



Press SET button after setting

" COUNTER " means how many times you have pressed

If you want to clean this number to zero,press "RESSET" "▼" for a few seconds

3.Put objects when the machine has reached the desired temperature, close heating plates, waiting time.

4. When times up, machine will open automatic, take out printing items.

## 5.For cleaning and maintenance of the printed products.

5.1. Printed items can be washed 24 hours after printing.

5.2.Do not rub the printed image after printing.

5.3. Frequently wash items by washing machine can damage the image.

5.4. Avoid using cleaner or brush image.