


ENTRY LEVEL CALENDER HT-1720P T2B CONTROL PANEL SETTING




- **Power on/off:** Press the button to turn on or turn off the machine.

F/R- Direction Switching Button:

Control the rotation direction of the roller.


- **Motor on/off:** Start or stop the motor


- **Heating Button:** Start or stop the heating function.

Temperature setting: Pressure the up or down button to set the temperature of the roller.

The actual temperature will be displayed after 6 seconds setting.

Specifications setting:

Press and hold: “” for 3 second to enter in the specification setting;

Press  to show D-1,D-2,D-3,D-4, D-5 in order.;

END to indicate the end of setting;

Press up and down button to regulate the value of specification;

If the buttons are not pressed in 1 minute, the specification setting state will be automatically ended.

Spec. No.	Spec. Content	Temp. Range	Default Setting
D-1	Temp. Calibration	-50---50	0 °C
D-2	High temp. alarm point	10-270C	250 °C
D-3	Max. temp.	10-250	220°C
D-4	Temp. unit	0-°C, 1-°F	0
END	Setting completed		