


Desktop one color installation steps

Step 1. Fix the adjustable arm on stand with 2 pcs long M8 bolt
notice the direction.

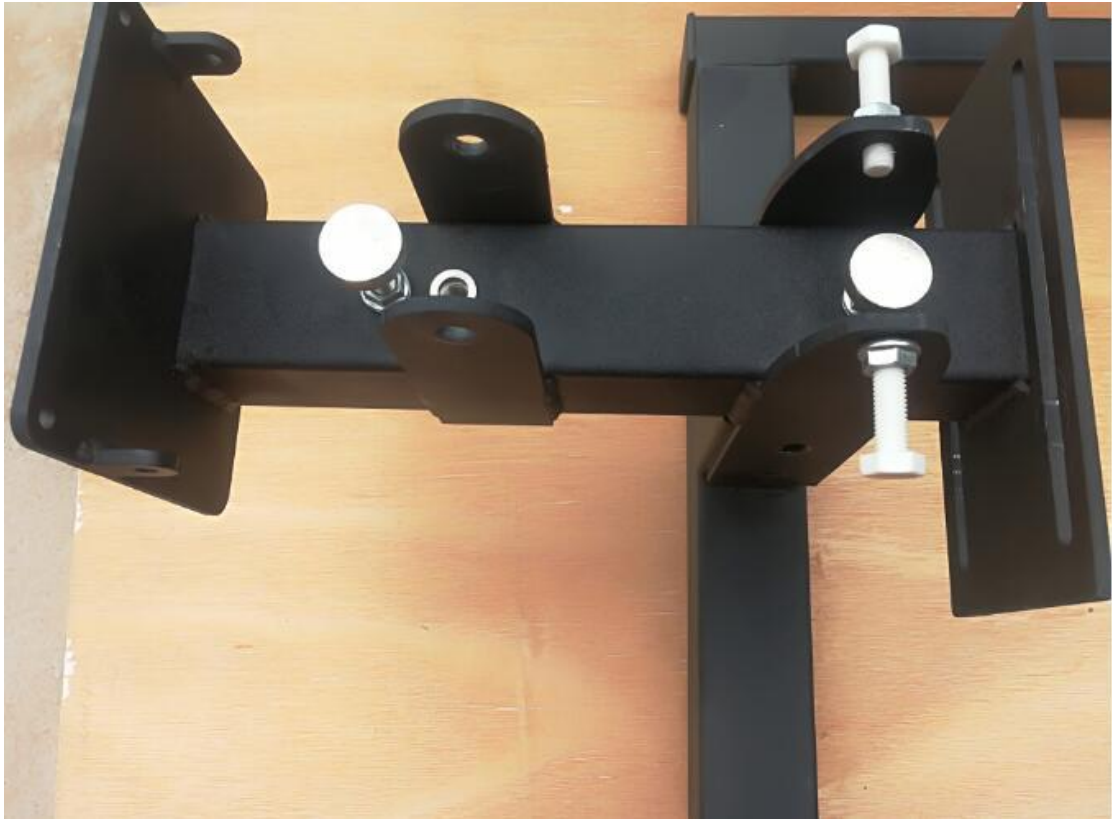

Step 2. Fix the pallet arm on adjustable arm with 4 pcs short M8 bolts



Step 3. Fix the screen arm on adjustable arm with 1 pc long M10 bolt
notice: using special nut.



Step 4. Fix the screen clamps on screen arms with 2 pcs round head bolt.



Step 5. Fix the springs and adjustable bolts like picture



Step 6. Fix the black box on wooden pallet with 6 screws



Step 7.insert the pallet into pallet arm.



Finish the installation